

RACKUSA

STORAGE SYSTEMS = RACKING = SHELVING

Owner's Manual

Industrial Bulk Rack Shelving



WARNING: Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

ADULT ASSEMBLY REQUIRED DUE TO THE PRESENCE OF SMALL PARTS, SHARP POINTS, SHARP EDGES.

READ & SAVE THESE INSTRUCTIONS

Thank you very much for choosing a RackUSA product!

It is important that you read the entire manual to become familiar with this product before you begin using it.

This shelving rack is designed for certain applications only. RackUSA is not responsible for issues arising from modification or improper use of this product such as an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it was designed.

Table of Contents

- Intended Use 4
- Packaging Contents 4
- Technical Specifications 4
- Important Safety Information 4
- Specific Operation Warnings 6
- Main Parts of Shelving Rack 6
- Assembly Instructions 7
- Operating Instructions 8
- Maintenance 9
- Troubleshooting 9
- Parts Diagram 10
- Parts List 10
- Replacement Parts 10
- Limited Warranty 11

Intended Use

The RackUSA Industrial Bulk Rack Shelving is a storage unit with a welded steel frame offering industrial-strength storage. Four mesh decks allow air circulation around stored items. The rack can stand individually, or for greater stability, be joined together using the common upright frame. The 4-Tier rack has an 8000 lb. total capacity.

Packaging Contents

- Uprights (2)
- Mesh Decks (4)
- Load Beams (8)
- Nuts and Bolts (32)
- Upper Cross Bars (12)
- Lower Cross Bars (4)
- Owner's Manual

Technical Specifications

Property	Specification
Rack Dimensions	77 x 24 x 72 in.
Maximum Load Capacity per Shelf	2000 lb. Evenly Distributed
Upright Frame Dimensions	24" x 72"
Load Beam Dimensions	72"
Upper Cross Bar Dimensions	23 1/4"
Lower Cross Bar Dimensions	23 5/8"
Mesh Deck Dimensions	22" x 72"

Important Safety Information

WARNING

- Read and understand all instructions. Failure to follow all instructions may result in serious injury or property damage.
- The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this tool. Always be aware of the environment and ensure that the tool is used in a safe and responsible manner.
- Do not allow persons to operate or assemble the product until they have read this manual and have developed a thorough understanding of how it works.
- Do not modify this product in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the product. There are specific applications for which the product was designed.
- Use the right tool for the job. DO NOT attempt to force small equipment to do the work of larger industrial equipment. There are certain applications for which this equipment was designed. It will be a safer experience and do the job better at the capacity for which it was intended. DO NOT use this equipment for a purpose for which it was not intended.
- Industrial or commercial applications must follow OSHA requirements.

WARNING

WORK AREA SAFETY

- Inspect the work area before each use. Keep work area clean, dry, free of clutter, and well-lit. Cluttered, wet, or dark work areas can result in injury. Using the product in confined work areas may put you dangerously close to cutting tools and rotating parts.
- Keep children and bystanders away from the work area while operating the tool. Do not allow children to handle the product.

WARNING

PERSONAL SAFETY

- Stay alert, watch what you are doing, and use common sense when operating the tool. Do not use the tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool may result in serious personal injury.
- Dress properly. Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts. Air vents on the tool often cover moving parts and should be avoided.
- Wear the proper personal protective equipment when necessary. Use ANSI Z87.1 compliant safety goggles (not safety glasses) with side shields, or when needed, a face shield. Use a dust mask in dusty work conditions. Also use non-skid safety shoes, hardhat, gloves, dust collection systems, and hearing protection when appropriate. This applies to all persons in the work area.
- Do not overreach. Keep proper footing and balance at all times.

CAUTION

SHELVING RACK USE AND CARE

- Do not force the rack. Products are safer and do a better job when used in the manner for which they are designed. Plan your work, and use the correct product for the job.
- Check for damaged parts before each use. Carefully check that the product will operate properly and perform its intended function. Replace damaged or worn parts immediately. Never operate the product with a damaged part.
- Store the product when it is not in use. Store it in a dry, secure place out of the reach of children.

Inspect the tool for good working condition prior to storage and before re-use.


- Use only accessories that are recommended by the manufacturer for use with your product. Accessories that may be suitable for one product may create a risk of injury when used with another tool. Never use an accessory that has a lower operating speed or operating pressure than the tool itself.

Specific Operation Warnings

WARNING

- Do not exceed the rated load capacity per shelf.
- For use on a hard, level surface.
- Do not climb or use the shelf as a ladder.
- To prevent the shelf from tipping, evenly distribute the weight on each shelf and keep the heaviest loads on the bottom shelf.

Main Parts of Shelving Rack

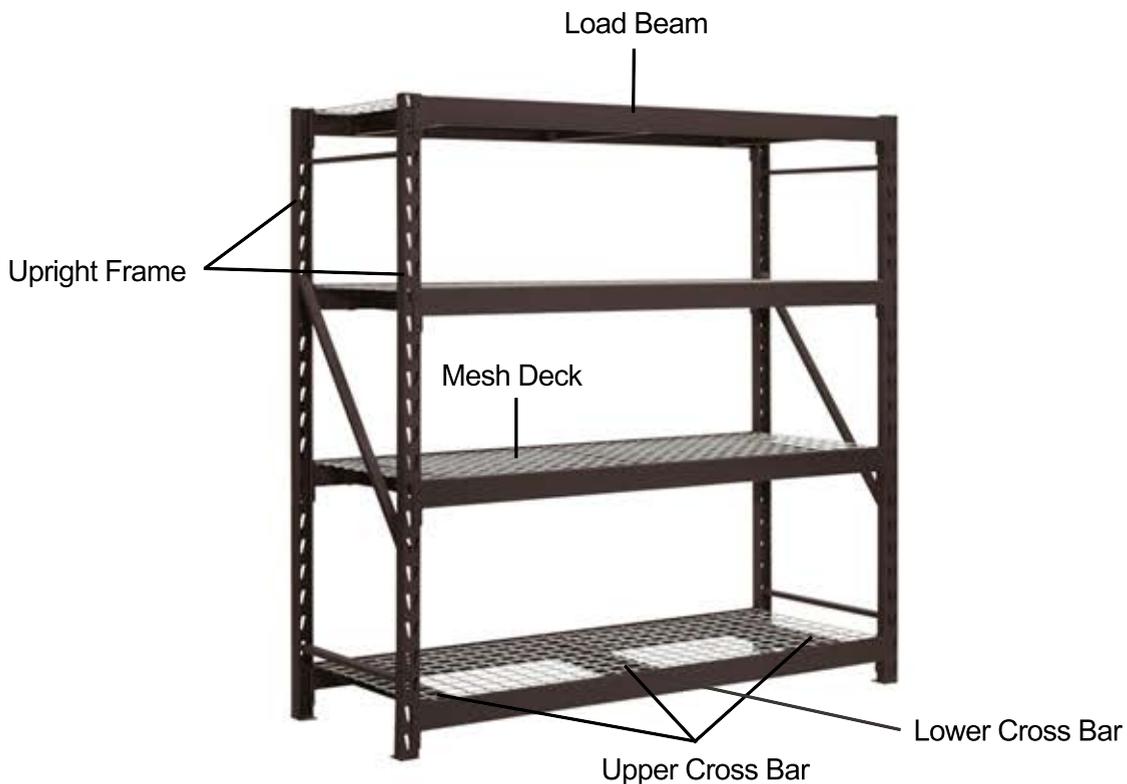


Subassembly	Quantity
Upright Frame	4
Load Beam	8
Upper Cross Bar	12
Lower Cross Bar	4
Mesh Deck	4

Assembly Instructions

WARNING

- This shelving rack must be placed on a level surface. Failure to do so can result in unit failure, poor product performance, or a possible tipping safety hazard.

1. Attach the beams to the uprights (see Figure 1), starting at the bottom shelf by using both end frames to establish the left and the right sides of the unit

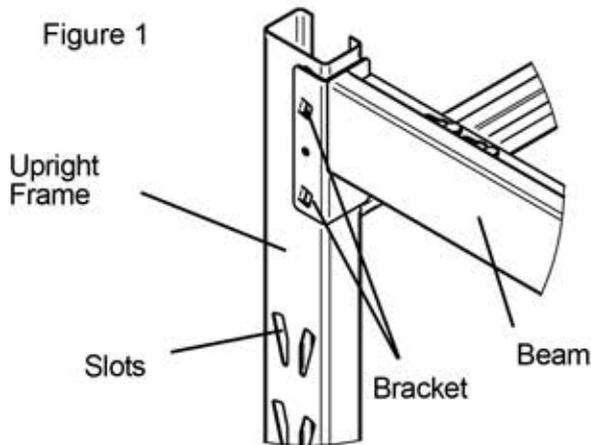

2. After a beam has been placed in both upright slots, push the beam down at both ends (a rubber mallet may be used) to help drive the base beam tabs into the slots to secure the beam. Continue assembling each shelf from bottom to top level (front and back).

Figure 2

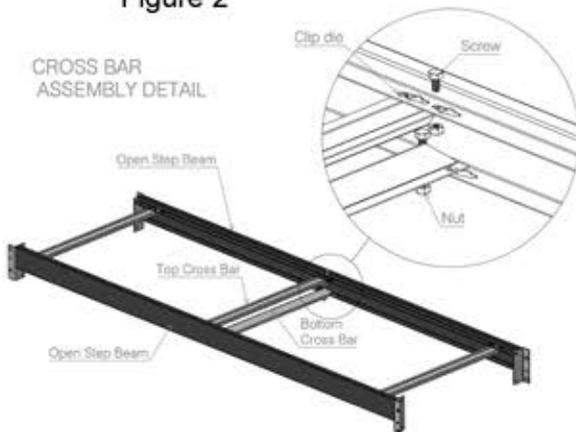


Image 1


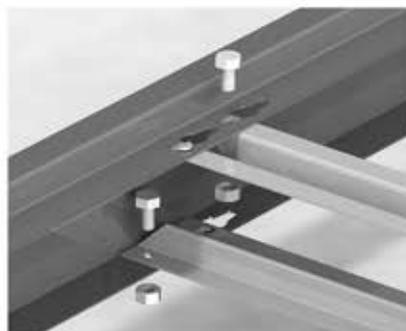


Image 2

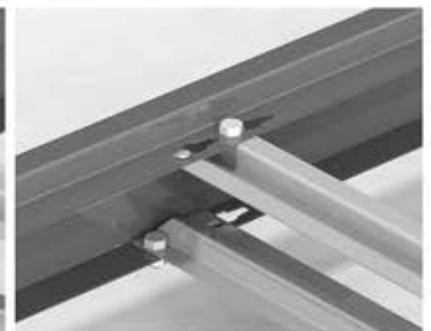

3. If the base beam tabs are bent due to mishandling, adjust the tabs back to their proper form (see Figure 1).


4. The completed rack should have four (4) levels evenly spaced for maximum stability. Although the beams are adjustable in height, they must be evenly spaced so the stability of the unit is not compromised.

5. Cross bars are used to assist with a heavy load. Insert cross bars, 1 large in lower part in each level and align the punched edge of each cross bar to the holes inside the beams (see Figure 2.) Important: You must use nuts and bolts in each cross bar (See Figures 1 and 2.)

6. Use the nuts and bolts provided to properly secure the beams.

7. After all load beams and cross beams are in place, place a mesh deck into each shelf (see Figure 3).


Figure 3

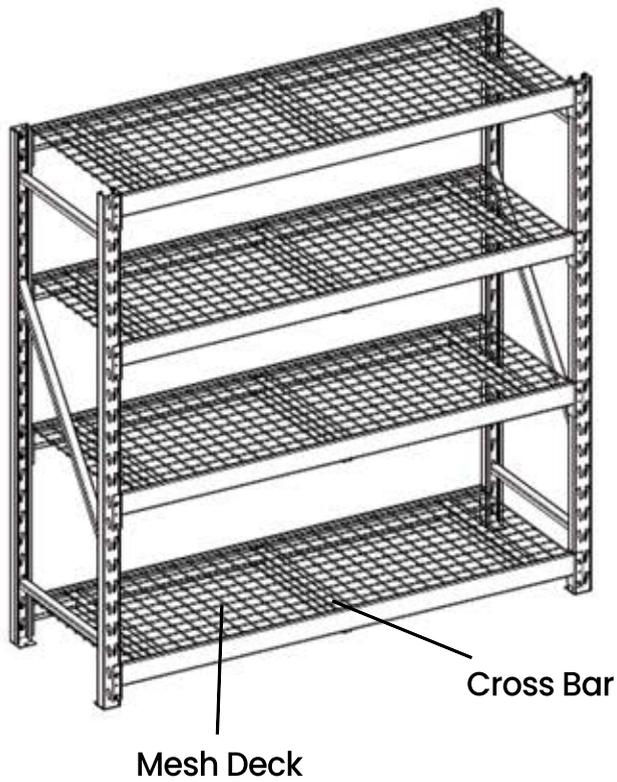

Operating Instructions

WARNING

- Do not exceed the rated load capacity per shelf.
- For use on a hard, level surface.
- Do not climb or use the shelf as a ladder.
- To prevent the shelf from tipping, evenly distribute the weight on each shelf and keep the heaviest loads on the bottom shelf.

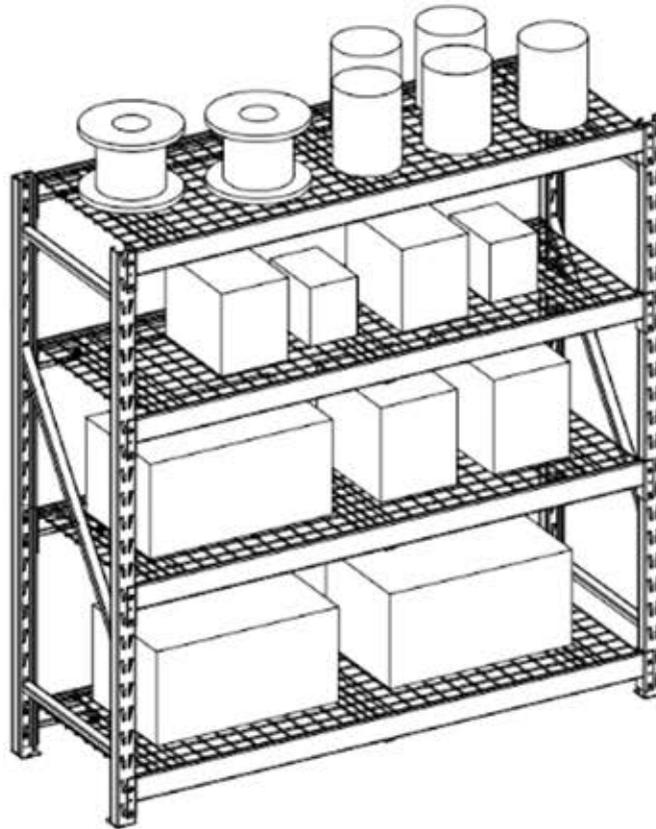

Maintenance

- To avoid rusting, keep the unit out of damp or wet environments.
- If shelves become damp, wipe with a cloth to avoid rusting. Be sure to dry the shelf joints.

Troubleshooting

Failure	Possible Cause	Corrective Action
Shelf is bent	Shelf is overloaded	Unload shelf and reload, staying under 2000 lb per shelf
Shelf has a rusty surface	Shelf has moisture creating rust	Repaint the rusted surface

Parts Diagram



Parts List

Part Number	Part Description	Quantity
1	Upright	2
2	Load beam	8
3	Mesh deck	4
4	Upper Cross Bar	12
5	Lower Cross Bar	4
6	Nut and Bolt (See Page 7, images 1 and 2)	32

Replacement Parts

- For replacement parts and technical questions, please call Customer Service at 800 267 8197.
- Not all product components are available for replacement. The illustrations provided are a convenient reference to the location and position of parts in the assembly sequence.
- When ordering parts, the following information will be required: item description, item model number, item serial number/item lot date code, and the replacement part reference number.
- The distributor reserves the rights to make design changes and improvements to product lines and manuals without notice.

Limited Warranty

Rack USA ("We" or "Us") warrants to the original purchaser only ("You" or "Your") that the RackUSA product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of one year from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, Your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product or product component without charge to You or refund the purchase price (less shipping). This limited warranty is not transferable.

Limitations on the Warranty

This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

Obligations of Purchaser

You must retain Your product purchase receipt to verify date of purchase and that You are the original purchaser. To make a warranty claim, contact us at 800 267 8197, identify the product by make and model number, and follow the claim instructions that will be provided. The product and the purchase receipt must be provided to Us in order to process Your warranty claim. Any returned product that is replaced or refunded by Us becomes our property. You will be responsible for return shipping costs or costs related to Your return visit to a retail store.

Remedy Limits

Product replacement or a refund of the purchase price is Your sole remedy under this limited warranty or any other warranty related to the product. We shall not be liable for: service or labor charges or damage to Your property incurred in removing or replacing the product; any damages, including, without limitation, damages to tangible personal property or personal injury, related to Your improper use, installation, or maintenance of the product or product component; or any indirect, incidental or consequential damages of any kind for any reason.

Assumption of Risk

You acknowledge and agree that any use of the product for any purpose other than the specified use(s) stated in the product instructions is at Your own risk.

Governing Law

This limited warranty gives You specific legal rights, and You also may have other rights which vary from state to state. Some states do not allow limitations or exclusions on implied warranties or incidental or consequential damages, so the above limitations may not apply to You. This limited warranty is governed by the laws of the State of Minnesota, without regard to rules pertaining to conflicts of law. The state courts located in Dakota County, Minnesota shall have exclusive jurisdiction for any disputes relating to this warranty.



ANY PROBLEM?
PLEASE CONTACT US

800 267 8197

HAVE YOUR SERIAL NUMBER
READY



SERIAL
NUMBER

WWW.RACKUSA.COM